

NO-COAT.

Structural Laminate
Drywall Corner System

ULTRATOOLS

NEW!


DOUBLE BARREL HOPPER

The NO-COAT® Double Barrel Hopper is set up for all angles, all the time. Install off-angles, inside 90's, bullnose, and outside 90's in record time. No time-consuming adjustments or extra hardware necessary. Made of stainless steel and high density polyurethane for durability and easy cleanup.



Installation Instructions

1. Pour the desired amount of All-Purpose joint compound into the ULTRATOOL™ Hopper tank.
2. Place the ULTRATOOL™ Hopper on top of a 5 gallon bucket. This allows reuse of excess joint compound.
3. Cut NO-COAT® corner to the desired length and firmly push the product through gate on the opposite side of the Hopper than the gate you are going to be using. Adjust gates by loosening knob and sliding gate and gate controller. Tighten knob once gate and controller are in position. Raise the unused gate on the opposite side of Hopper slightly so it does not drag on NO-COAT® product as it slides through it. Make sure to install NO-COAT® with the joint tape paper side (the side with the NO-COAT® logo) against the wall for maximum bonding.
4. Once the corner is on the wall, use an ULTRATOOL™ Roller to ensure a uniform and high-speed installation. Beginning from the middle of the corner, roll upward to ensure a tight fit. Proceed by rolling down the rest of the product in a firm and square manner. This process will remove any excess compound and firmly bond the product to the wall. This process also eliminates air pockets in the joint compound. Wipe away excess compound with your drywall knife.
4. Skim the corner with joint compound to create a seamless finish. Repeat as necessary.

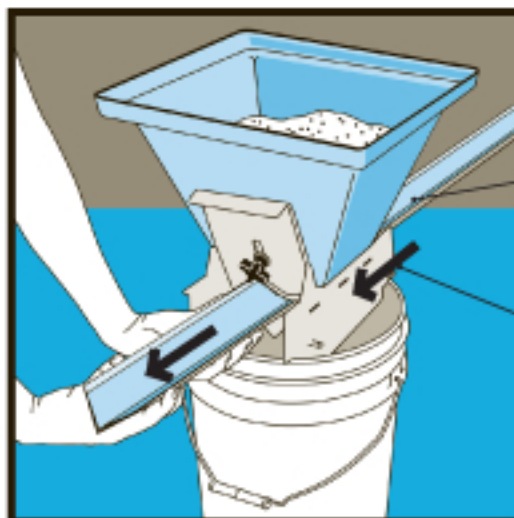

Push NO-COAT® product through the gate opposite of the gate that you are going to use.

Direction of NO-COAT® product.

Tip: Before filling the NO-COAT® Double Barrel Hopper with All-Purpose joint compound, run a short piece of corner through the Hopper gates. This allows you to make the most accurate tolerance adjustment. To avoid run off, compound should have the same consistency as boxing mud.

ULTRATOOL™ NO-COAT® DOUBLE BARREL HOPPER

Description

NO-COAT® has perfected this standard industry tool to accommodate all inside and outside angles without time-consuming part changeovers and reconfiguration.

Applications


- ULTRATRIM™ inside, outside, and bullnose corners
- ULTRAFLEX™ 450 and ULTRAFLEX™ 325

Features/Benefits

- Eliminates part changes or reconfiguration – handles both inside and outside angles
- Ensures a uniform and high-speed installation
- Single piece gates with ergonomic hand knob allow for fast and easy adjustments

Product Details

- High density polyurethane tank and gate controllers
- Stainless steel reservoir trough and gates
- Dimensions: 14"x 14"x 13.5"

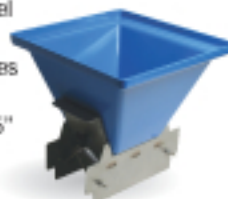

OPTIONAL FLEX BRACKET

- Newly available FLEX BRACKET accessory allows you to pre-cut and pre-crease NO-COAT® ULTRAFLEX™ 450 and ULTRAFLEX™ 325 rolls at any length for long, one piece inside or outside corners



Product Details

- Aluminum
- Dimensions: 32"x 7.5"x 7"

THE NO-COAT® STRUCTURAL DRYWALL CORNER SYSTEM

The NO-COAT Structural Laminate (SLAM™) design is a revolutionary drywall corner system that delivers superior strength and durability, saves labor and mud, and eliminates costly callbacks. The total system includes rolls, pre-cut stick lengths, arch sticks, tools and accessories for easy installation and flawless results.



Product Specifications and Submittals located online at www.no-coat.com or call 1-888-662-6281.

The NO-COAT® Warranty

NO-COAT offers an unparalleled lifetime warranty against defects in materials and workmanship.

For more information regarding our warranty, installation, and the complete NO-COAT corner system (including tools and accessories), contact us at 1-888-662-6281 or visit www.no-coat.com.

STRUCTUS
BUILDING TECHNOLOGIES